


Der GEL 211 besitzt im Auslieferungszustand eine Firmware, die eventuell nicht dem neuesten Stand entspricht. Deswegen wird dringend empfohlen, vor der Verwendung des Geräts ein Update durchzuführen. Hierzu stellt Lenord + Bauer auf seiner Webseite www.lenord.de/service/download-bereich/software entsprechende Dateien zur Verfügung (Schaltfläche GEL 211...).

Es werden zwei Dateiversionen angeboten: *exe* und *zip*. Beide Dateien enthalten das Firmware-Update selbst und bedarfsweise neuere Treiber und/oder Aktualisierungen der Web-Oberfläche. Die *exe*-Datei kann nur in einer Windows-Umgebung verwendet werden. Sie führt den nachfolgend für die *zip*-Datei beschriebenen Vorgang automatisch aus.

Gehen Sie wie folgt vor:

- ▶ Verbinden Sie den GEL 211 über USB mit dem PC

Windows informiert über ein neues Massenspeichergerät mit dem zugewiesenen Laufwerksbuchstaben.

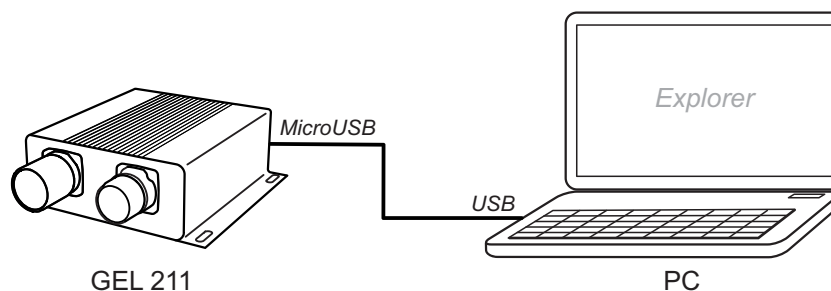

zip

- ▶ Wählen Sie die heruntergeladene Datei im Explorer und entpacken Sie sie in die oberste Ebene des GEL 211-Massenspeichers

Die einzelnen Dateien werden dabei in die entsprechenden Unterverzeichnisse auf dem GEL 211 kopiert; Rückfragen zum Überschreiben von bereits existierenden Dateien bestätigen.

- ▶ Werfen Sie das Medium (Massenspeicher GEL 211) am PC aus und trennen Sie die USB-Verbindung (GEL 211 ausschalten)
- ▶ Versorgen Sie das Gerät wieder mit Spannung

Das Firmware-Update wird jetzt geladen. Während dieses Vorgangs blinkt die Power-LED für einige Sekunden. Sobald die LED dauerhaft grün leuchtet, kann der GEL 211 anwendungsgemäß betrieben werden.

- ! Während des Ladevorgangs die Stromzufuhr nicht unterbrechen!

exe

- ▶ Starten Sie die heruntergeladene Datei im Explorer und folgen Sie den Installationsanweisungen

Application Note

Version 2015-12


On delivery, the GEL 211 contains a firmware that may not be up to date. Therefore it is urgently recommended that you update the firmware before using the device. For doing so, Lenord + Bauer provides certain files on its website www.lenord.com/service/download-area/software (GEL 211... button).

There are two file formats existing, an *exe* and a *zip* file. Both files contain the update itself and possibly new drivers and/or modifications of the web content. The *exe* file is only applicable in a Windows environment. It will automatically do the steps described in the following for the *zip* file.

Proceed as follows:

- ▶ Connect the GEL 211 to the PC via the USB ports

Windows informs about a new mass storage existing with a certain drive letter.

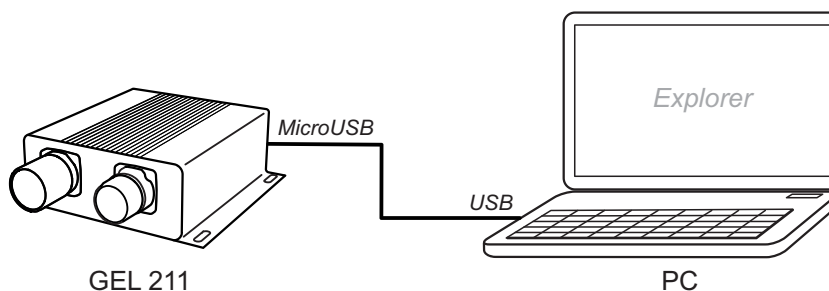

zip	exe
<ul style="list-style-type: none"> ▶ Select the downloaded file in the explorer and unzip it to the top level of the GEL 211 mass storage <p>The individual files will be copied into the corresponding subdirectories of the GEL 211; confirm the prompt for overwriting existing files.</p>	<ul style="list-style-type: none"> ▶ Launch the downloaded file in the explorer and follow the setup instructions
<ul style="list-style-type: none"> ▶ Eject the mass storage GEL 211 and disconnect the USB link (switch off GEL 211) ▶ Supply the device with power again 	

The firmware update will now be loaded. The power LED flashes during this process (for a few seconds). As soon as the LED is on constantly you can operate the GEL 211 as intended.

- ! Do not interrupt power supply while loading is in progress.